


## Disassembly

- Unlock shackle
- Use a Phillips screwdriver to remove security screw
- Remove security nut and trap door
- Remove cylinder and driver
- Place lock on flat surface and close shackle
- Actuator and ball bearings should fall out, if not, see page 20
- Remove shackle and spring

## Assembly

- Insert shackle spring and shackle
- Insert ball bearings
- Insert actuator as shown
- Check operation with follower tool
- Insert cylinder with driver as shown
- Insert trap door
- Insert security nut and screw
- Tighten security screw
- Check operation

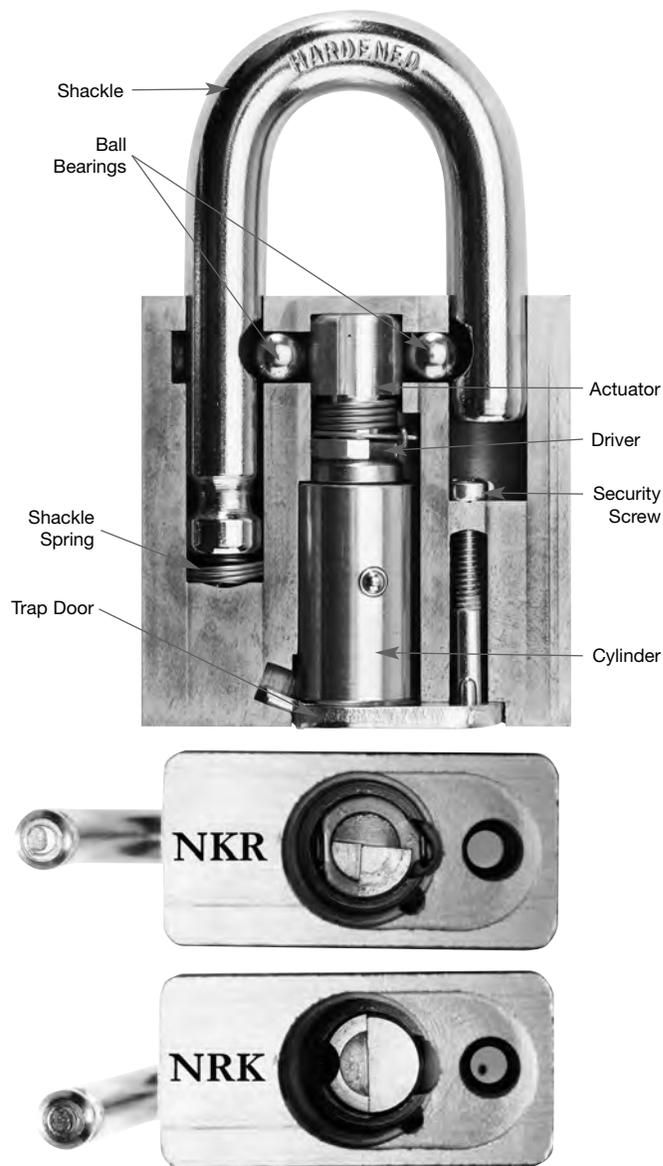

| Model | Shackle  |        |             | Shackle Spring | Actuator    |             | Ball Bearings |
|-------|----------|--------|-------------|----------------|-------------|-------------|---------------|
|       | Diameter | Length | Part No.    |                | NKR         | NRK         |               |
| A7200 | 5/16"    | 1-1/8" | APKG1582240 | APKG1606010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7201 | 5/16"    | 2"     | APKG1582290 | APKG1606010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7202 | 5/16"    | 3"     | APKG1582310 | APKG1606010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7205 | 5/16"    | 5"     | APKG0000954 | APKG1606010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7260 | 3/8"     | 1-1/8" | APKG1581550 | APKG1611010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7261 | 3/8"     | 2"     | APKG1581570 | APKG1611010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7262 | 3/8"     | 3"     | APKG1581590 | APKG1611010    | APKG1188270 | APKG2081160 | APKG1806010   |
| A7300 | 7/16"    | 1-1/8" | APKG1582910 | APKG1612010    | APKG2084100 | APKG2081160 | APKG1807020   |
| A7301 | 7/16"    | 2"     | APKG1582920 | APKG1612010    | APKG2084100 | APKG2081160 | APKG1807020   |

For Quantity Content and Ordering Information, See the Price Book  
For Trap Door Part Numbers see page 32