





TECHNICAL INFORMATION

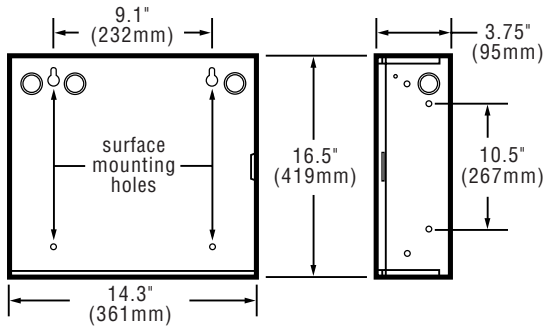

Cat. No. E-FS302 & E-FS502 3 & 5 Zone Panels

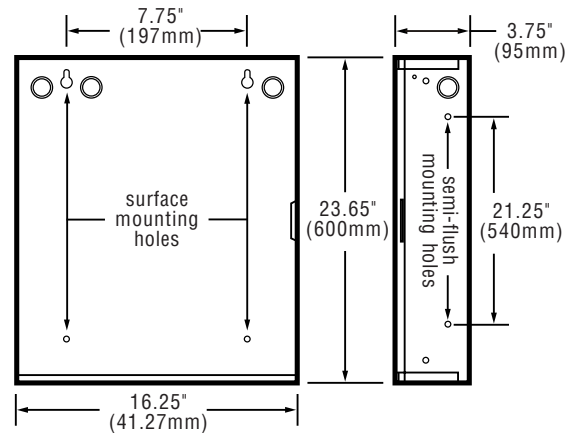

Cat. No. E-FS1004 10 Zone Panel

ORDERING INFORMATION

Cat. No.	Function
E-FS101#	1 Zone Conventional Fire Alarm Control Panel - 1 Class B IDC and 1 Class B NAC, 120V AC
E-FS302#	3 Zone Conventional Fire Alarm Control Panel - 3 Class B IDC's and 2 Class B NACs, 120V AC
E-FS502#	5 Zone Conventional Fire Alarm Control Panel - 5 Class B IDC's and 2 Class B NACs, 120V AC
E-FS1004#	10 Zone Conventional Fire Alarm Control Panel - 10 Class B IDC's and 4 Class B NACs, 120V AC

*Add "G" for gray cabinet or "R" for red cabinet. Add "D" for installed dialer (3, 5 and 10 zone panels only. e.g. E-FS302RD is a red FireShield panel with installed dialer.

ACCESSORIES

Cat. No.	Name	Function
BC-2	Battery Cabinet	Gray battery box - holds two batteries
BC-2R	Battery Cabinet	Red battery box - holds two batteries
CTM4.7	City Tie Module	Reporting events to local energy Master fire alarm box (see page 7)
EOL36-11	End-of-line Resistor	One 3.6K resistor and one 1.1K resistor
FSAT**	Trim Plate	One, two, three or four gang white trim plate for Remote Annunciator
FSDACT	DACT/Dialer	Reporting events to a remote monitoring facility (see page 4)
FSCU	Configuration Software	PC downloading of configuration and event history
FSRRM	Relay Module	Five Form C relays rated 1 amp each configurable as zone or common system mode (see page 5)
FSRRM-S11	11" Mounting track	Mounting track for 2-4 FSRRMs. Mounts in MFC-A or other listed FA enclosure
FSRSI***	Remote System Indicator	Remote Annunciator Module - common LEDs & sounder w/silence (see page 6)
FSRZI-A***	Remote Zone Indicator	Remote Annunciator Module - 5 Zone LEDs (see page 6)
FSTRIM35*	3 & 5 Zone Trim Ring	Semi-flush mounting of 3 & 5 zone panels
FSTRIM10*	10 Zone Trim Ring	Semi-flush mounting of 10 zone panels
MFC-A	FSRRM Mounting Cabinet	Holds up to 4 FSRRM modules when used with optional FSRRM-S11 snap-trak (see page 5)
RPM	Reverse Polarity module	Reporting alarm status to remote monitoring facility (see page 7)
XTR3A120	Power Supply Expander	Expands 10 zone panel with 2.5 amps additional power

*Add "G" for gray or "R" for red; **add "1" for one gang, "2" for two gang, "3" for three gang, or "4" for four gang plate; ***Not compatible with 1 zone panel