


Fuji Duo Series Manual Motor Starters Accessories

Busbar system

Features

- The busbar system reduces wiring time and saves floor space.
- The busbar makes it easy to power from 2 to 5 manual motor starters, with no wiring needed.
- The 3-phase feed-in terminals are used to connect the wire for the power supply circuit.
- The busbar cover guards against accidental touching of nonconnected busbar terminals (charged parts).
- If using BZ0TCRE terminal cover with BM3R series MMS, the busbar system can not be used.

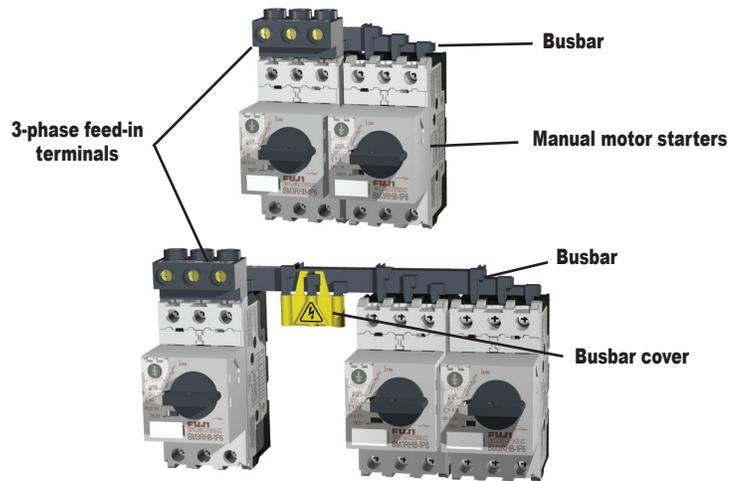

Note: Busbar photos continued on next page.



BZ0BFRA



BZ0BFVA



BZ0BCRA



BZ0BCVA

Busbar System Components and Ratings								
Part Number	Price	Description	Used with	Specifications	Weight (g)			
BZ0BR02A	\$21.50	Busbar	BM3R	Continuous current: 64A max. pin connection	2-BM3R, modular space: 45mm	30		
BZ0BR03A	\$19.00				3-BM3R, modular space: 45mm	50		
BZ0BR04A	\$22.50				4-BM3R, modular space: 45mm	70		
BZ0BR05A	\$24.00				5-BM3R, modular space: 45mm	90		
BZ0BR12A	\$18.00				2-BM3R, modular space: 54mm	30		
BZ0BR13A	\$21.50		BM3R+ 1 external accessory, 9mm wide	Continuous current: 64A max. pin connection	3-BM3R, modular space: 54mm	55		
BZ0BR14A	\$24.00				4-BM3R, modular space: 54mm	80		
BZ0BR15A	\$25.50				5-BM3R, modular space: 54mm	105		
BZ0BV02A	\$34.00				BM3V	Continuous current: 126A max. pin connection	2-BM3V, modular space: 55mm	140
BZ0BV03A	Retired						3-BM3V, modular space: 55mm	240
BZ0BV04A	\$51.00		4-BM3V, modular space: 55mm	340				
BZ0BV12A	\$36.50		BM3V + 1 external accessory, 9mm wide	2-BM3V, modular space: 64mm			150	
BZ0BV13A	\$46.50			3-BM3V, modular space: 64mm			270	
BZ0BV14A	Retired			4-BM3V, modular space: 64mm	380			
BZ0BFRA	\$19.00		3-phase feed-in terminal	BM3R	Continuous current: 64A max. Applicable cable size: 25mm ² max.	40		
BZ0BFVA	\$38.50	BM3V		Continuous current: 126A max. Applicable cable size: 50mm ² max.	170			
BZ0BCRA	\$5.00	Busbar cover	BZ0BR	For pin connection	10			
BZ0BCVA	Retired		BZ0BV	NOTE: Some fine tuning and fitting adjustments may be needed.	5			

Fuji Duo Series Manual Motor Starters

Accessories

Busbar system (continued)


Dimensions

(mm)



For BM3RHB-xxx


BZ0BR0xx Without external accessory

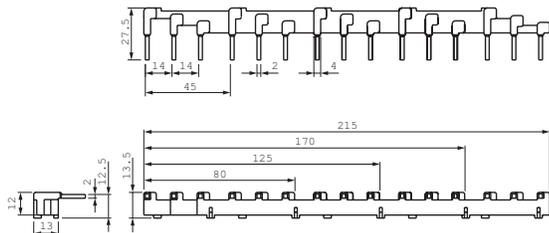

- BZ0BR02A: 80 mm
- BZ0BR03A: 125 mm
- BZ0BR04A: 170 mm
- BZ0BR05A: 215 mm


For BM3VHB-xxx

BZ0BV0xx Without external accessory

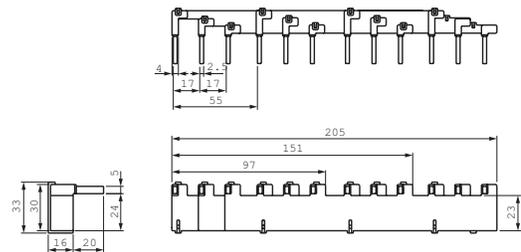


- BZ0BV02A: 97 mm
- BZ0BV03A: 151 mm
- BZ0BV04A: 205 mm

BZ0BR1xx With 1 external accessory

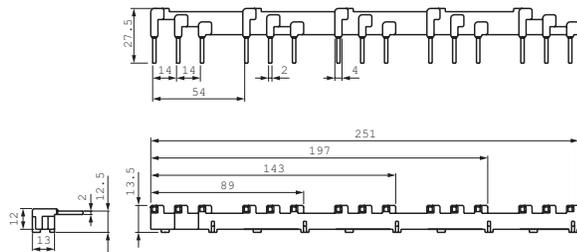


- BZ0BR12A: 89 mm
- BZ0BR13A: 143mm
- BZ0BR14A: 197 mm
- BZ0BR15A: 251 mm

BZ0BV1xx With 1 external accessory, 9mm wide

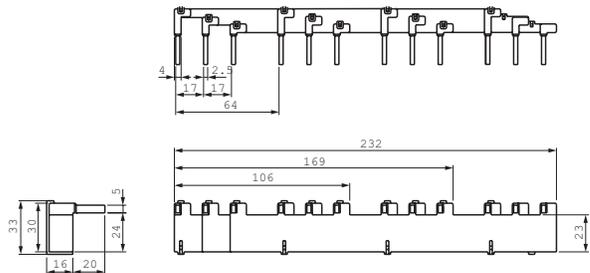

- BZ0BV12A: 106 mm
- BZ0BV13A: 169 mm
- BZ0BV14A: 232 mm

BZ0BFRA 3-phase feed-in terminals

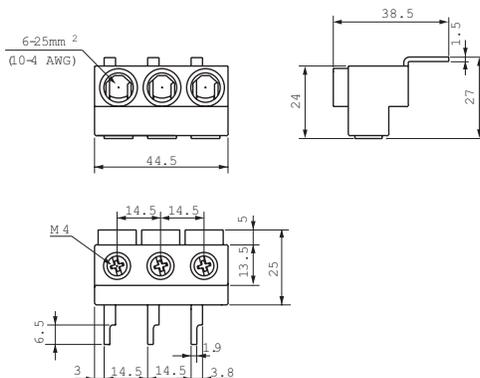

BZ0BFVA

