



Invigoration® Series

Tandem steam generator control kit
K-5558

Features

- Power Clean™ technology offers one-touch automatic cleaning and safe maintenance
- Controls the Power Clean feature
- Adjustable temperature settings between 90°F and 125°F
- Quick-connect RJ-12 cord and connector
- Mounting arm and gasket included
- Two thermostatic steam heads with aromatherapy reservoirs
- Includes control panel and two steam heads with aromatherapy reservoirs
- Circular steam head design allows steam to be evenly dispensed throughout shower
- Fast-Response® technology produces a luxurious steam shower in 60 seconds
- 20-minute safety auto shutoff
- Digital display with clock
- For use with Invigoration™ Series 18kW - 30kW Steam Generators
- Required for use with KOHLER Invigoration® Series 18kW-30kW steam generators
- Improved sensor reduces temperature fluctuations for a consistent steam shower temperature
- Easily adjustable control panel allows user to set temperature (90-125°F range) and steam session duration

Material

- KOHLER finishes resist corrosion and tarnishing



Codes/Standards

None Applicable

KOHLER® Electronic Faucets, Valves, and Controls Five-Year Limited Warranty

See website for detailed warranty information.

Available Colors/Finishes

Color tiles intended for reference only.

Color	Code	Description
	CP	Polished Chrome
	SN	Vibrant® Polished Nickel
	AF	Vibrant® French Gold
	BN	Vibrant® Brushed Nickel
	BV	Vibrant® Brushed Bronze
	BL	Matte Black
	2MB	Vibrant® Brushed Moderne Brass
	TT	Vibrant Titanium
	BGP	Vibrant Brushed Graphite

1-800-4KOHLER (1-800-456-4537)

Kohler Co. reserves the right to make revisions without notice to product specifications.

For the most current Specification Sheet, go to www.kohler.com USA or www.kohler.ca Canada

2-19-2026 20:25 - US/CA


THE BOLD LOOK
OF **KOHLER®**



Invigoration® Series

Tandem steam generator control kit

K-5558

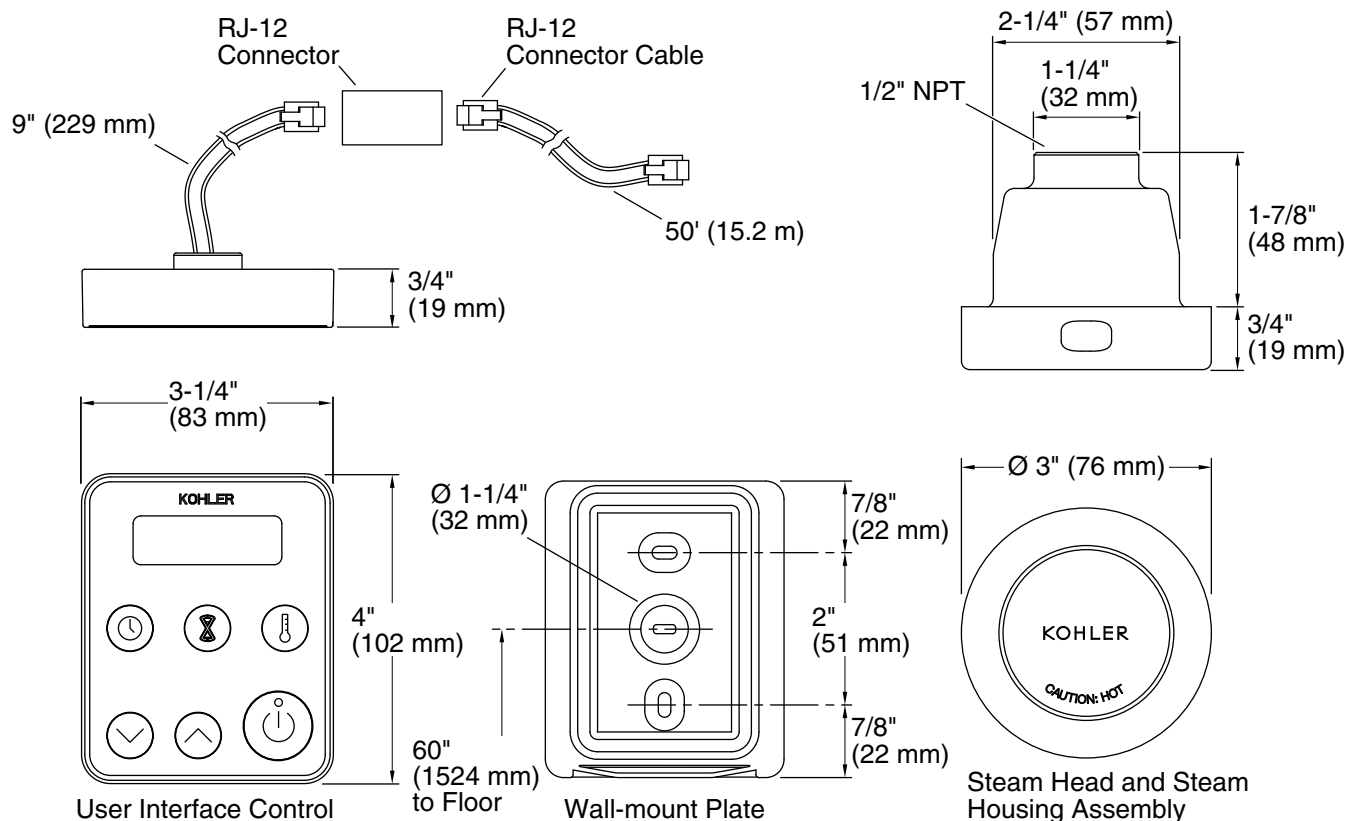

Technical Information

All product dimensions are nominal.

Material: Plastic

Notes

Install this product according to the installation guide.

CAUTION: Risk of personal injury. Do not install the User Interface Control outside the steam enclosure. The User Interface must be installed within the enclosure to allow the sensors to regulate the temperature and control the flow of steam.

CAUTION: Risk of scalding. Do not locate the steam head near a seat or bench, as the steam head is hot during operation and may scald the user if touched.

The temperature sensor should be mounted on the wall opposite the steam head. The steam head should be located as far from the seating area as possible.

Locate the steam head 6" (152 mm) above the floor and at least 4-1/2" (114 mm) from the threshold.