

NEWSTRIPE INC.

REAR CASTER For all dual handle NEWSTRIPE paint strippers

Your Rear Caster Kit Includes:

- Caster & Mount Assembly
- Instructions
- 3/16" Allen Wrench



MOUNTING

Remove the items from the package. Loosen the screws in the split collars of the mount (#2) and remove the top halves. Place the caster assembly (#1) at rear of the machine. Pull the release pin (#3) and rotate the caster upward to allow the caster mount halves of the collars around the bottom cross bar of the handle. (The caster mount will rest against rear of handle on both sides. See picture above for location). Attach the top halves of the collars (#2) and then center the caster and retighten the screws.

OPERATING

Hold the caster and pull the release pin (#3) to lower the caster. Raise the back of the machine and the caster will lock into place. When finished using the caster, lift the rear of machine and pull the release pin (#3) to lower the machine. Push the caster up with your foot until the pin locks it in upper hole.

1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • www.newstripe.com

Rear Caster / March 2017