


DK-5050 Drain Kit



Drain with Installation Kit

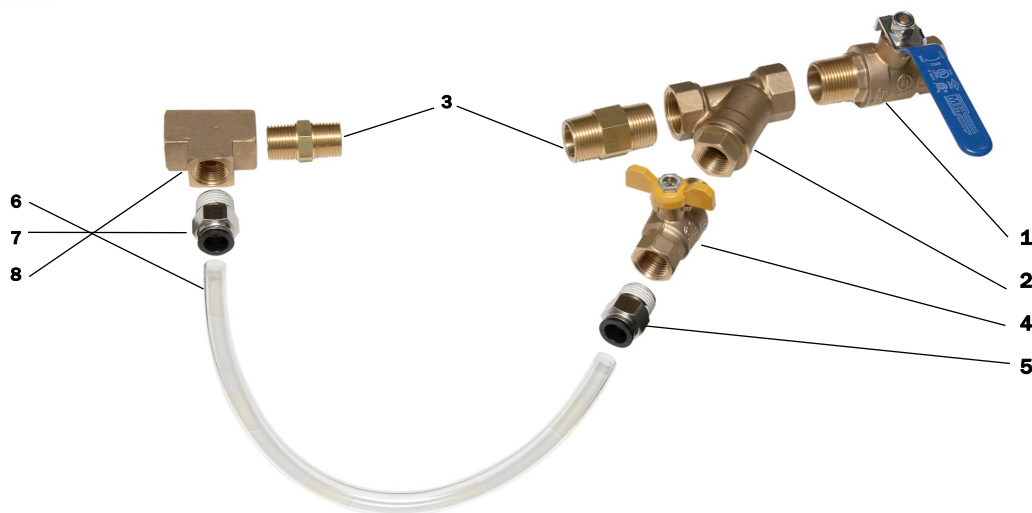

DK-5050

Item No.	Qty	Part Number	Description
1	1	MBB-50	1/2" MPT x FPT Brass Ball Valve
2	1	YSFB-50	1/2" FPT Forged Brass Y-Strainer
3	2	23325X8	1/2" MPT x 1.81L Hex Nipple
4	1	MBB-38TH	3/8" MPT x FPT Brass Ball Valve with T-Handle
5	1	PF-3850	3/8" MPT x 1/2" OD Tube Push to Connect Fitting
6	1	PH-50L14	1/2" OD x 3/8" ID x 14" Clear Poly Tubing
7	1	PF-5050	1/2" MPT x 1/2" OD Tube Push to Connect Fitting
8	1	23700X8	1/2" FPT Pipe Tee

The drain kit components ship in 2 bags: one large, one small. The use of Teflon® tape or equivalent is required on all threads and included in the kit.

Drain Inlet Piping (Large Bag Components)

Thread the hex nipple (3) and the ball valve (1) into the Y-Strainer (2) as shown above.

Thread in the T-Handle ball valve (4) into the lower connection on the Y-strainer (2). Next thread the push to connect fitting (5) into the opposite end of the T-Handle ball valve (4). Install the assembly into the inlet port of the drain.

Drain Outlet Piping (Small Bag Components)

Thread the hex nipple (3) and push to connect fitting (7) into the pipe tee (8) as shown. Install this assembly into the drain outlet port.

Final Step

Connect the clear tubing (6) to both push to connect fittings (5 and 7) and tighten.