

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

# Westward® Auxiliary Stand

## Description

Westward auxiliary stand is designed as a means of partial support for, and the positioning of, vehicle components during their installation/removal, but not for use in stabilizing or supporting vehicles. Heavy gauge steel construction and compliance with the latest ANSI/PALD standards ensure safety, strength and stability.

## Specifications

Model	Capacity	Base Diameter	Min. Height	Max. Height
1VW33	3/4 Ton (1500 Lbs)	12"	53-3/8"	79-1/8"

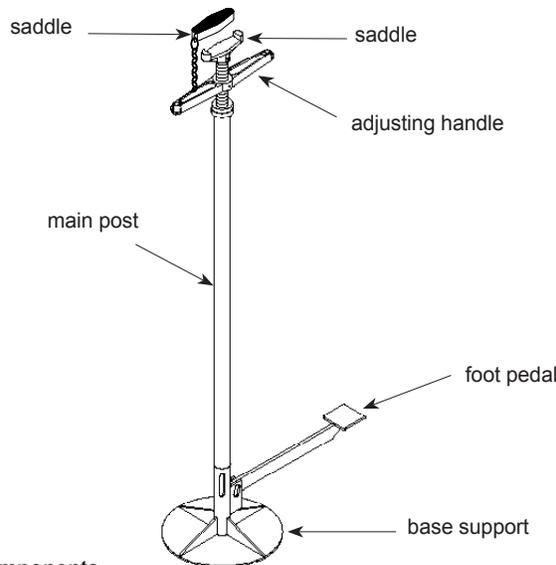


Figure 1 - Auxiliary Stand Components

## General Safety Information

**▲ WARNING** Familiarize yourself thoroughly with

product, read and understand owner's manual before use.

Do not exceed rated capacity.

Use only on hard level surface.

Adequately support the vehicle before starting repairs.

Do not use to support or stabilize vehicle.

Center load on saddle.

No alterations shall be made to this product.

Failure to heed these markings may result in severe, even fatal injury and/or property damage.

## Assembly

Use Figure 2 as reference.

1. Insert solenoid (#11) into main post (#5).
2. Attach bearing (#10), adjusting handle (#8) & saddle (#6) on solenoid.
3. Secure saddle using lock pin (#7, punch in), and make sure it is stable.

4. Attach main post into base support (#1) secure by pin (#4), washer (#12) & "C" clip (#13).
5. Attach foot pedal (#14), secure by pin (#15), washer (#2) & "C" clip (#3).
6. Attach grease fitting nipple (#9) onto adjusting handle.

## Operation

**Note: Grease prior to first use**

### RAISING

Turn adjusting handle clockwise until saddle contacts load. Continue turning handle to raise load to required height. Use foot pedal for fine adjustment

### LOWERING

Turn adjusting handle counter-clockwise.

### Maintenance

Periodically inspect the stand. Ensure all parts move freely. Apply grease to fitting as needed. If rust appears, sand affected area and cover with suitable utility paint.

### Owner / User Responsibility

The owner and/or user must have an understanding of these operating instructions and warnings before using this auxiliary stand. Personnel involved in the use and operation of equipment shall be careful, competent, trained, and qualified in the safe operation of the equipment and its proper use when servicing motor vehicles and their components. Warning information should be emphasized and understood. Owner and/or user must study and maintain for future reference the manufacturer's instructions. Owner and/or user is responsible for keeping all warning labels and instruction manuals legible and intact.

# Westward® Auxiliary Stand

Owner / User Responsibility  
(Continued)

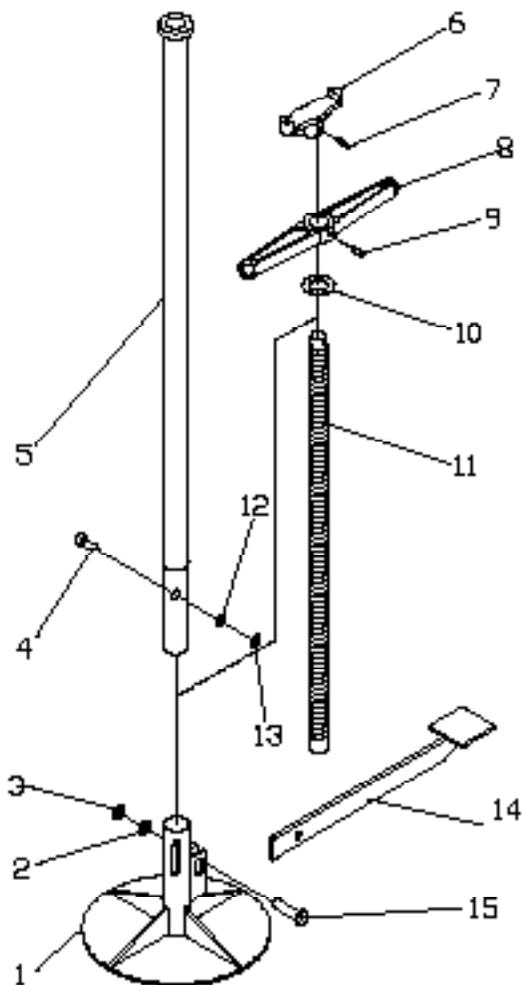


Figure 2 - Assembly Parts Illustration

**For Repair Parts, call 1-800-323-0620**

**24 hours a day - 365 days a year**

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list

Address parts correspondence to:

Grainger Parts  
 P.O. Box 3074  
 1657 Shermer Road  
 Northbrook, IL 60065-3074 U.S.A.

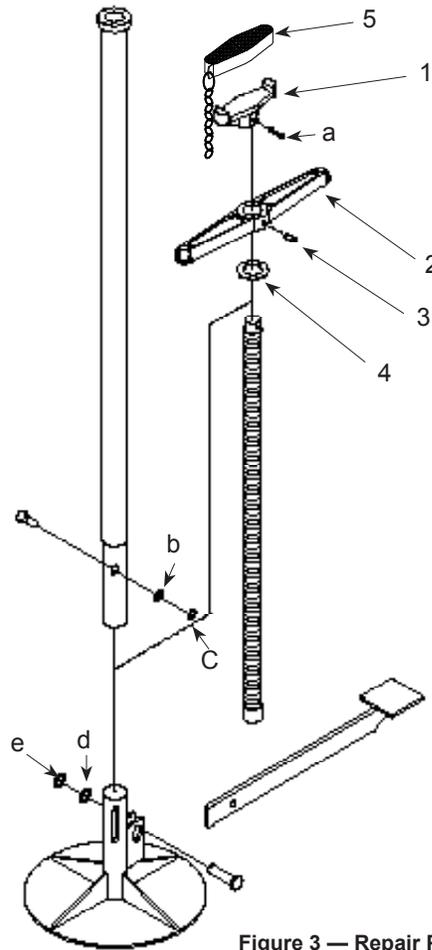


Figure 3 — Repair Parts Illustration

**Repair Parts List**

Reference Number	Description	Part Number For Model: 1VW33 (1500 Lbs)	Quantity
1	Saddle	T455-00003-000	1
2	Adjusting Handle	T455-00001-000	1
3	Grease Nipple	5701-00006-000	1
4	Bearing	5602-00052-000	1
5	Saddle Pad	T455-00002-000	1
**	Hardware Kits (Includes 3, 4 and a~e)	T456-04000-000	1

# Westward® Auxiliary Stand

## LIMITED WARRANTY

**WESTWARD ONE-YEAR LIMITED WARRANTY.** *Auxiliary Stand*, Model covered in this manual, is warranted by Westward to the original user against defects in workmanship or materials under normal use for one year after date of purchase. Any part which is determined to be defective in material or workmanship and returned to an authorized service location, as Westward designates, shipping costs prepaid, will be, as the exclusive remedy, repaired or replaced at Westward's option. For limited warranty claim procedures, see PROMPT DISPOSITION below. This limited warranty gives purchasers specific legal rights which vary from jurisdiction to jurisdiction.

**LIMITATION OF LIABILITY.** To the extent allowable under applicable law, Westward's liability for consequential and incidental damages is expressly disclaimed. Westward's liability in all events is limited to and shall not exceed the purchase price paid.

**WARRANTY DISCLAIMER.** Westward has made a diligent effort to provide product information and illustrate the products in this literature accurately; however, such information and illustrations are for the sole purpose of identification, and do not express or imply a warranty that the products are MERCHANTABLE, or FIT FOR A PARTICULAR PURPOSE, or that the products will necessarily conform to the illustrations or descriptions.

Except as provided below, no warranty or affirmation of fact, expressed or implied, other than as stated in the "LIMITED WARRANTY" above is made or authorized by Westward.

**PRODUCT SUITABILITY.** Many jurisdictions have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While Westward attempts to assure that its products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the product is installed or used. Before purchase and use of a product, review the product applications, and all applicable national and local codes and regulations, and be sure that the product, installation, and use will comply with them.

Certain aspects of disclaimers are not applicable to consumer products; e.g., (a) some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you; (b) also, some jurisdictions do not allow a limitation on how long an implied warranty lasts, consequentially the above limitation may not apply to you; and (c) by law, during the period of this Limited Warranty, any implied warranties of implied merchantability or fitness for a particular purpose applicable to consumer products purchased by consumers, may not be excluded or otherwise disclaimed.

**PROMPT DISPOSITION.** Westward will make a good faith effort for prompt correction or other adjustment with respect to any product which proves to be defective within limited warranty. For any product believed to be defective within limited warranty, first write or call dealer from whom the product was purchased. Dealer will give additional directions. If unable to resolve satisfactorily, write to Westward at address below, giving dealer's name, address, date, and number of dealer's invoice, and describing the nature of the defect. Title and risk of loss pass to buyer on delivery to common carrier. If product was damaged in transit to you, file claim with carrier.

**Manufactured for Grainger International, 100 Grainger Pkwy., Lake Forest, Illinois 60045 U.S.A.**